


I .Specification

- 1). Item No.: AM-DF401
- 2). Power Rate: 6800W,
(Induction: 2000W+1500W, Ceramic: 2000W+1300W)
- 3). Voltage: 220-240V, 50/60 Hz

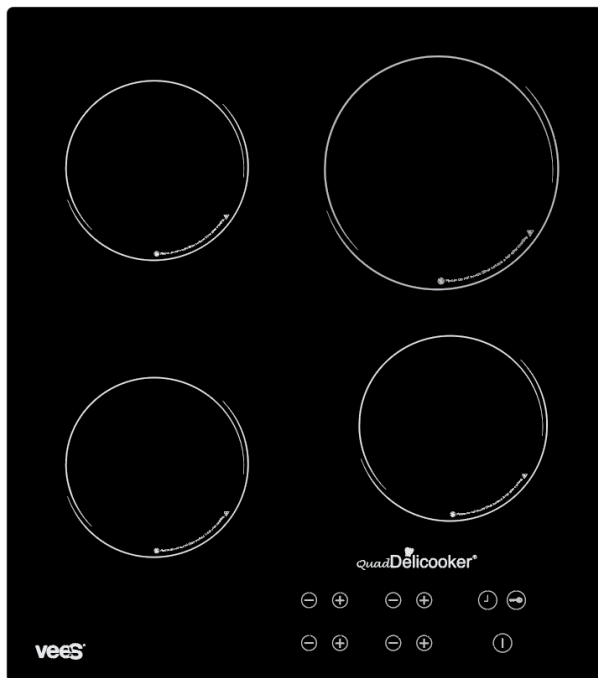

II.Cautions

- 1). Do not plug with wet hands.
- 2). Do not plug into a socket where several other appliances are plugged in.
- 3). Do not use if the plug cord is damaged or the power plug does not fit the socket safely.
- 4). Do not modify the parts, or repair the unit by yourself.
- 5). Do not use the unit near flame or wet places.
- 6). Do not use where children can easily touch the unit, or allow children to use the unit by themselves.
- 7). Do not place on unstable surfaces.
- 8). Do not move the unit when the pot or the pan is on it.
- 9). Do not heat the pot empty or overheat the pot.
- 10). Do not place metallic objects such as knives, forks, spoons, lids, cans, and aluminum foils on the top plate since they can get hot.
- 11). Use the unit with sufficient space around it. Keep the front side and either right or left side of the unit clear.

- 12). Do not use the unit on carpet or tablecloth (vinyl) or any other low-heat-resistant article.
- 13). Do not place a sheet of paper between the pot or the pan and the unit. The paper may get burnt.
- 14). If the surface is cracked, switch off to avoid the possibility of electric shock and then take to the service center immediately.
- 15). Do not block air intake or exhaust vent.
- 16). Do not touch the top plate right after removing the pot or the pan, as the top plate will still be very hot.
- 17). Do not place the unite near to the objects which are affected by magnet, such as: radios, televisions, automatic-banking cards and cassette tapes.
- 18). The power cord must be replaced by qualified technicians.



- 19) CAUTION: Hot surface.

- 20) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 21) The temperature of accessible surfaces may be high when the appliance is operating.
- 22) Aluminium foil and plastic vessels not placed on hot surfaces.
- 23) the glass-ceramic surfaces are not to be used for storage.
- 24) metallic objects such as kitchen utensils, cutlery etc. shall not be placed on the hob surface within the cooking zones since they could get hot;
- 25) take care when operating the appliance, as rings, watches and similar objects worn by the user could get hot when in close proximity to the hob surface
- 26) only use vessels of the type and size recommended.
- 27) After use, switch the hob element off by means of its control. Do not rely on the pan detector.
- 28) appliance not to be cleaned with water jet;
- 29) any repairs shall be carried out only by persons trained or recommended by the manufacturer.
- 30) care be taken to ensure that the splashback and surrounding area free of metallic surfaces



- 32) non-ionizing electromagnetic radiation
- 33) Appliance is not intended to be operated by means of an external timer or separate remote-control system.

Warning: Children should be supervised to ensure that they do not play with the appliance.

III. How to Use

- 1). Place suitable cooking utensils in the center of the top plate and plug in, the power light will shine
- 2). Press ON/OFF button 1 second, the cooker standby, and choose the burner, to adjust the power level by "+" or "-" from level 1 to level 9

Left: Induction: to adjust the power level by "+" or "-" from level 1 to level 9

Right Ceramic: to adjust the power level by "+" or "-" from level 1 to level 5

- 3) Timer function. Press the "+" or "-" button which would like to set timer function, then press timer button to set the time.
- 4) Press "LOCK" button to lock the all button except ON/OFF button, and press LOCK" button 3 seconds to unlock.
- 5). The appliance is equipped with an overheat protection. If the pot or pan is getting too hot, the appliance will switch off power, a buzzer sounds and on the display occurs -H". Should this happen, wait for some minutes and cool the appliance down. After that, the appliance works without problems. If meat or vegetables should be roasted, please use the temperature function to avoid any over heating .
- 4). This appliance is liable to get hot during use.

IV. Usable and Non-usable Utensils

1). Usable Pans

Steel or cast iron, enameled iron, stainless steel, flat-bottom pans / pots with diameter from 12 to 26cm.



2). Non-usable Pans

Heat-resistant glass, ceramic container, copper, aluminum pans/pots. Rounded-bottom pans/pots with bottom measuring less than 12cm.



V. How to Clean

- 1). Disconnect plug and wait until the unit is cooled down completely. Clean after using every time.
- 2). If the pots/pans are used without being cleaned, discoloration or cooked on stains may be caused.
- 3). Do not use benzine, thinner, scrubbing brush or polishing powder to clean the induction cooker.
- 4). Wipe using dish washing agent and damp cloth.
- 5). Use vacuum cleaner to suck up dirt from the air intake and exhaust vent.
- 6). Never run water over the unit (Water gets inside may cause malfunction).