

## Product Specifications

VEES Delicooker

Model	Rated Voltage	Rated Power	Temperature
HL-450NEG	220-240V~50/60Hz	4500W (Left: 2200W+Right: 2300W)	620 C°

 
## Troubleshooting

The faults	Inspection and management
The Delicooker not heated, the display screen is off.	Whether the power is turned on? Whether the plug is inserted properly? Whether the socket is damaged? Whether all the burners are having the same problem?
Circuit breaker trips when power is on.	Whether the use of power exceeds the power rating?
Power light flashes, then the light is off.	For cooking at high power for a long period, the Delicooker will start its automatic protection device to avoid overheating of internal components. When the light stops flashing, the user can continue to use it.

**vees**<sup>®</sup>







 **Delicooker**<sup>®</sup>

INSTRUCTION MANUAL

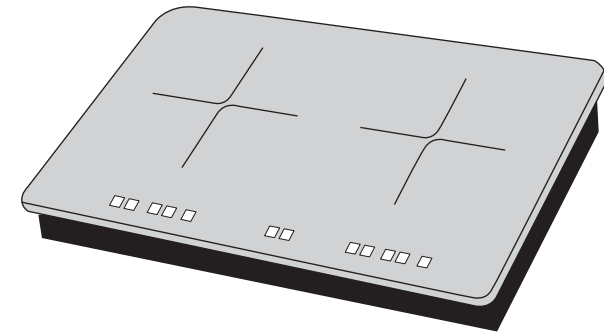

HL-450NEG

## Use of Cookware

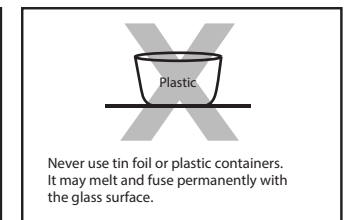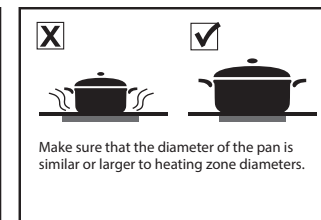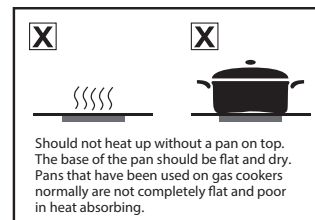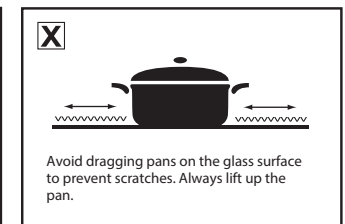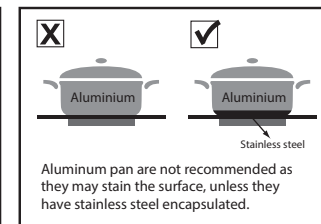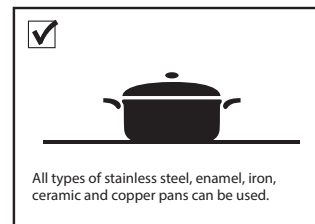      

### Disclaimer:

The company in publishing and printing of this manual has done its best to ensure that all informations and its contents are correct, if there are errors or omissions, we shall not be held responsible. In addition, with respect to any technical improvement of the product, the information will be given in the revised edition of the manual.

**vees**<sup>®</sup>

**Veess Kitchen Appliances Sdn. Bhd.** (1399548-P)

F-06-03, Setiawalk, Pusat Bandar Puchong, 47160 Puchong, Selangor, Malaysia.

Service Hotline: 03-8600 1648

www.vees.com.my

## Operation and Use



Lock

1



Timer

2



Power

3



ON/OFF

4



Hi

5



6

### ① Locking System

The lock system is to prevent incorrect operation.

### ② Timer

This function can be used as time schedule for cooking ( 5 minutes - 480 minutes ).

### ③ Power

To adjust power level from 1 to 9.

### ④ ON/OFF

The pilot lamp will flickering when the power is on and the Delicooker is on when the button is pressed (at this time, function selection pilot lamp will flickering and is on standby). It shuts down when the button is pressed again.

### ⑤ Cooking Zone Setting

### ⑥ Residual Heat Indicator

Which shows that the surface area is still hot. Therefore do not touch the surface area when the indicator light is ON.

#### \* Auto shut-off

After 30 minutes of being idle, Auto shut-off takes its effect.

### Operation Steps



Power

1. Select cooking zone area within 1 minute.
2. Lightly touching the ▼ or ▲ control key on the range area. The monitor will display the digit(s).

Note: If selection is not made within 1 minute, the appliance will automatically return to standby status.

Once the area to be used is selected, choose the power level. (For example: Level 7)



Power

3. Lightly touch ▼ or ▲ control key.

By lightly touching the ▼, Level 4 working status will be set.  
By lightly touching the ▲, Level 9 working status will be set.



Hi

4. If the cooking zone is consisting of 2 different power stovesets, it works in 1000W automatically, lightly touch "Hi" the cooking zone will turn to 2200W. Lightly touch "Hi" again the cooking zone will back to 1000W.

 
### Turning Off the Heating Zone



ON/OFF

Touch the switch of the heating zone area to turned off until the number "0" is displayed. Lightly touch the ON/OFF to switch off the cooktop at any time.

How to start the Time-setting Function (For example: Set 40 minutes timing)

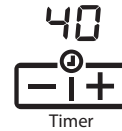

Timer

1. Lightly touch - or + control key. The indicator flashes "0" minutes. By lightly touching the + 4 times, time setting will be 40 minutes. If the user want to change the heating time, just lightly touch - or +, until you choose the time needed.
2. Heating time over. While heard for "BB" buzzers, showing the "00" minute, the cooking zone will shut off automatically and the function is cancelled.

How to start the Locking System



Lock

1. Lightly touch the control key for more than 2 seconds.
2. A "Beep" sound will be heard.
3. The symbol pilot lamp will ON (located above the control key) indicating the locking system is activated.

Note: All control key cannot be used while in the locked status. However the ON/OFF switch will function.

How to unlock the system

Lightly touch the control key for more than 2 seconds again and the "Beep" sound will be heard. The symbol pilot lamp will OFF and the locking system has been turned off.

## Installation method

Model	: HL-450NEG
Heating Zone Diameter	: 200mm, 200mm
Surface Dimension	: 730mm x 420mm
Cut out Dimension	: 670mm x 400mm
Bottom Dimension	: 665mm x 390mm

