

Maintenance

Replace the switch

Open the glass panel by touching the lighting button, then cut off the power and remove the fixed screws of panel. Next, take off the panel and remove the fixed screws of control box, which can replace the switch.

Bulb/Tube Changing:

You must pull off the electric plug before changing the bulb or tube. Keep the power rate of lamp no more than 1.5W and you could check the power rate from label.

Cleaning:

Do not use cleaning agents containing soda, acids, chlorides or solvents; Do not use abrasive cleaning agents, e.g. Power cleaners or cream cleaners and abrasive sponges, as well as pot scourers or sponges which have been used previously with abrasive cleaning agents. Wear gloves when cleaning surfaces to prevent your hands being hurt by seamed edges.


Malfunctions and solutions

Fault	Cause	Solution
Press any buttons but no responses	The plug is not or improperly inserted or no power supply	Plug the power cord
The lamp doesn't work.	The lamp is damaged, poorly contacted with the power supply.	Replace the lamp with correct rating or plug in the power cord again.
A slight electric shock on the surface of cooker hood.	The electric outlet is not effectively grounded.	Use one-way triple socket and have a good grounding
Irregular sounds when the impeller operates.	The impeller becomes loose and screws are not fixed.	Tighten up the screw of impeller
Oil dripping	Installation of oil collector is not suitable.	Install correctly.

vees®


RANGE HOOD

INSTRUCTION MANUAL

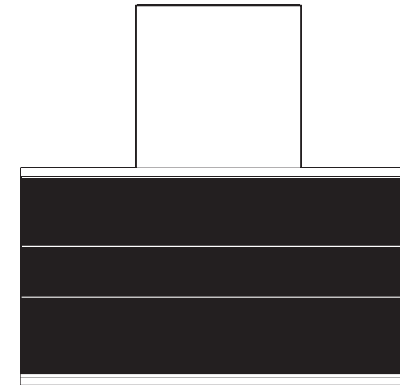

DH-309AC

 
Installation cautions

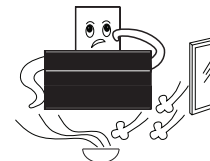


❑ Do not fix the hood so high, to prevent airflow from outside, which will affect the efficiency.




Do not burn the hood directly, to avoid damaging the hood and causing accidents.

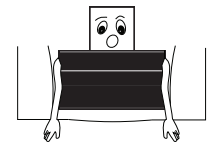

❑ Please keep an enough space for hood installing & dismantling; it is helpful for inspection and maintenance.

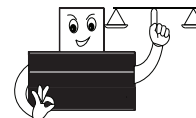

❑ Please keep the hood in balance while installing.

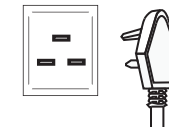

❑ Please use 13 amp socket and it should be well connected with the grounding.



❑ Please install by a skilled and qualified installer.

vees®

 
Veess Kitchen Appliances Sdn. Bhd. (1399548-P)








F-06-03, Setiawalk, Pusat Bandar Puchong, 47160 Puchong, Selangor, Malaysia.

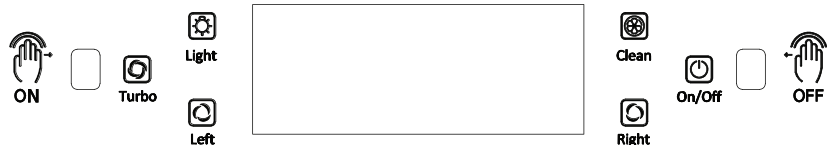Service Hotline: 03-8600 1648

www.vees.com.my

 
How to use



- On/Off**  Press this button once, cooker hood is on standby; again, it will be shut down with lights off.
- Clean Button**  Long press this button for 3 seconds when hood is on standby, heat auto-clean will be working for 4 minutes. Halogen lamp will on for 3 and half minutes, motor will run in low speed for last 30 seconds and shut off after this.
- Light Button**  Press this button, lights will be turned on; again, lights off.
- Left Motor**  On standby mode, press this button, left motor is working in high speed, press again to change to low speed; again, the motor is off and back to standby mode.
- Right Motor**  On standby mode, press this button, right motor is working in high speed, press again to change to low speed; again, the motor is off and back to standby mode.
- Turbo Motors / Timer**  On standby mode, press this button, 2 motors are working together in high speed, press again to change to low speed; again, the 2 motors are off and back to standby mode.
Long press this button for 3 seconds when hood is on standby to activate timer, adjust the hour when it flashing, press button again to switch to adjust minute; again, to quit the timer setting. Right fan button to - and left fan button to +. After 5 second without touch any button, will auto quit with current setting.
- Gesture Function**  Gesture slide from left to right to turn the 2 motors high speed and the light at the same time; again, 2 motors turn to low speed, repeat it to switch the speed. While motor is turned on, gesture slide from right to left to switch to standby mode; again, to shut down.

Installation method

Installation of Hood

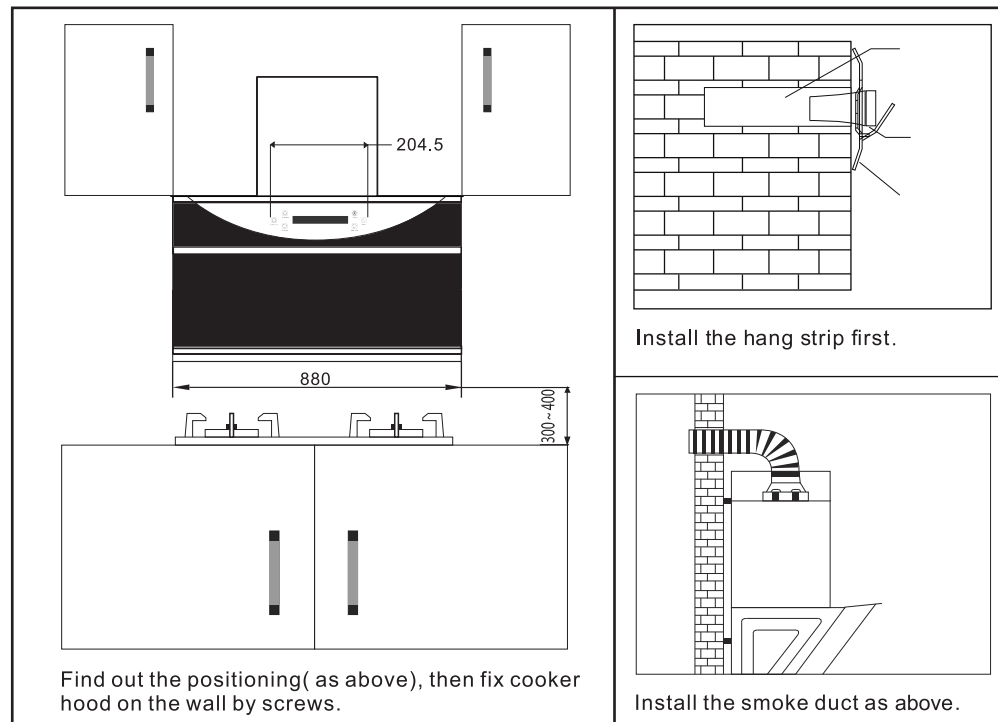


Find out the positioning(as above), then fix cooker hood on the wall by screws.

Install the hang strip first.

Install the smoke duct as above.

- Notice:
1. Make sure the smoke duct is bending less than 90 degree;
 2. Don't connect with other duct hose diameter is less than 178mm.

Installation of Smoke Duct

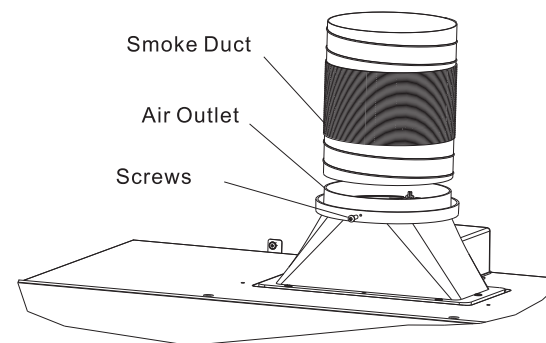

- a). Put the end of smoke duct (with ▼ mark) into the groove of air outlet, fix it with screws, then throw toward outside or public exhaust channel.
- b). If the smoke duct is too long, please keep it in roll and fix it to avoid shaking while hood is working.