


VEES PREMIUM

Instruction Manual Induction Cooker VDC-238KP

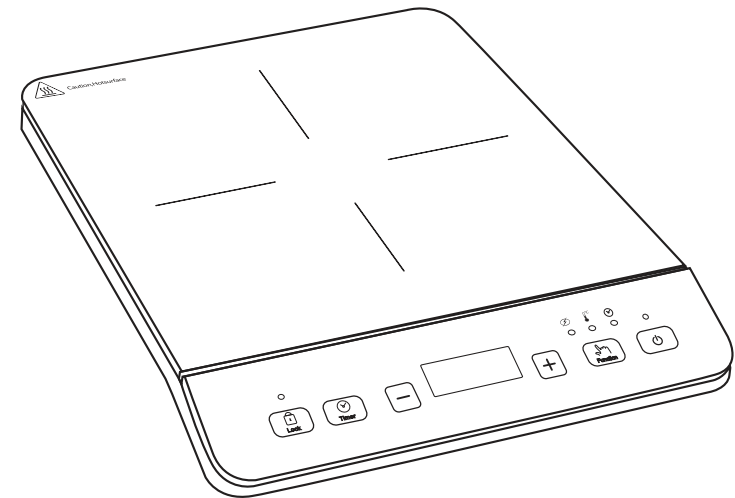

Service Centre:
F-06-03, Setiawalk, Pusat Bandar Puchong,
47160 Puchong, Selangor, Malaysia.
Service Hotline: 03-8600 1648

IMPORTANT

Read these instructions carefully before use.
Keep the instruction manual for future reference.

I.TROUBLESHOOTING

Error Codes	Potential Reasons	Solution
E0	Without cooking utensil on the stove top or using an inappropriate cooking utensil.	Place or replace a suitable pan with a flatted bottomed on the plate
E1	Induction cooker overheat	Clear all obstacles that block the vent under the bottom of the induction cooker, then place the cooker in an open area and try again after the appliance cools down.
E2	Stove-top overheat	Make sure water is inside the pan.
E3	Voltage under-loaded/over-loaded	Make sure the voltage and frequency comply with the rating label shown on the product.


VI.How to Clean

- 1). Disconnect plug and wait until the unit is cooled down completely. Clean after using every time.
- 2). If the pots/pans are used without being cleaned, discoloration or cooked on stains may be caused.
- 3). Do not use benzine, thinner, scrubbing brush or polishing powder to clean the induction cooker.
- 4). Wipe using dish washing agent and damp cloth.
- 5). Use vacuum cleaner to suck up dirt from the air intake and exhaust vent.
- 6). Never run water over the unit (Water gets inside may cause malfunction).


I .Specification

- 1). Model No.: VDC-238KP
- 2). Voltage: 220-240V~50/60Hz
- 3).Power Rate: 2000W
(300W.500W.800W.1000W.1200W.1400W.1600W.1800W.2000W)
- 4). Frequency: 50/60Hz
- 5). Temperature: 60-240°C
- 6). Timer: 0-180 minute


II .Cautions

- 1). Do not plug with wet hands.
- 2). Do not plug into a socket where several other appliances are plugged in.
- 3). Do not use if the plug cord is damaged or the power plug does not fit the socket safely.
- 4). Do not modify the parts, or repair the unit by yourself.
- 5). Do not use the unit near flame or wet places.
- 6). Do not use where children can easily touch the unit, or allow children to use the unit by themselves.
- 7). Do not place on unstable surfaces.
- 8). Do not move the unit when the pot or the pan is on it.
- 9). Do not heat the pot empty or overheat the pot.
- 10). Do not place metallic objects such as knives, forks, spoons, lids, cans, and aluminum foils on the top plate.
- 11). Use the unit with sufficient space around it. Keep the front side and either right or left side of the unit clear.
- 12). Do not use the unit on carpet or tablecloth (vinyl) or any other low-heat-resistant article.
- 13). Do not place a sheet of paper between the pot or the pan and the unit. The paper may get burnt.
- 14). If the surface is cracked, switch off and take to the service center immediately.
- 15). Do not block air intake or exhaust vent.
- 16). Do not touch the top plate right after removing the pot or the pan, as the top plate will still be very hot.
- 17). Do not place the unite near to the objects which are affected by magnet, such as: radios, televisions, automatic-banking cards and cassette tapes.
- 18). The power cord must be replaced by qualified technicians.
- 19).  Caution, Hot surface.
- 20): For safety reasons (children)various buttons do not respond when they are shortly touched. Press the keys on the entire surface with your finger.
- 21) This appliance is not intended to be operated by means of an external

time or separate remote-control system.

- 22) This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.
- 23) The appliance is not intended to be operated by means of an external timer or separate remote control system.
- 24) After use, switch the hob element off by means of its control. Do not rely on the pan detector.
- 25) appliance not to be cleaned with water jet;
- 26) any repairs shall be carried out only by persons trained or recommended by the manufacturer.
- 27) 

This product contains recyclable materials. Do not dispose this product as unstorted municipal waste. Please contact your local municipality for the nearest collection point.

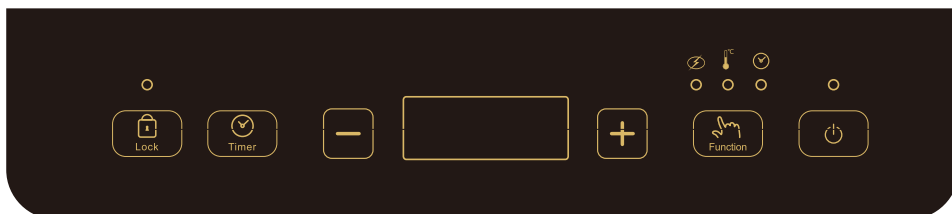

VOLTAGE/KWH

1. the purpose of this function key is to facilitate the user to view the voltage information that the current product is working.

LOCK

The Lock key is to protect the function keys designed to prevent children from using their products at will without knowing, After the Lock key is clicked, the Lock key light is on to prove that the function key is normally used. Other than the "Lock" and "On / Off" keys on the product, such as "+", "-", "Function""Key," Voltage / KWH "key can not be used

If you want to cancel Lock key, again touch the Lock key for 2-3 seconds, Lock button will be extinguished, the Lock key effect will disappear, other function keys can be used normally.

TIMER

Note: Time can be adjusted to show hours and minutes.

1. Display the minute time to adjust the explanation
Click the "Timer" key, the LED display will show 0:00 , the two digits of the minute will remind the flashing, you can use the "+" key and the "-" key to adjust the control minute time, LED display minutes The range is within 00-59 minutes.
2. Display the hour time adjustment instructions
Click the "Timer" button again, the LED display will adjust the display minutes to show hours, the two digits of hours will remind flashing, you can adjust the control hours by "+" and "-" LED display shows the hours of the time range of 00-03 hours.

IV. Usable and Non-usable Utensils

1). Usable Pans

Steel or cast iron, enameled iron, stainless steel, flat-bottom pans / pots with diameter from 12 to 26cm.



2). Non-usable Pans

Heat-resistant glass, ceramic container, copper, aluminum pans/pots. Rounded-bottom pans/pots with bottom measuring less than 12cm.

