 


vees signature

INSTANT BOILING WATER DISPENSER **Instruction Manual**

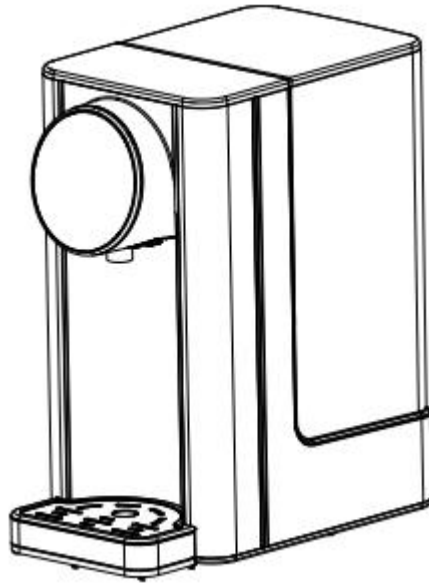

Model: VIB-D2798SS

Read this booklet thoroughly before using and save it for future reference.

1 Safety Instructions

Please make sure to follow below measures in operations of this water dispenser

1. Read all instructions carefully before using.
2. Before use the appliance, please make sure the voltage indicated on the rating plate corresponds to the wall outlet at your home, if not please do not operate it and connect your local distributor for proper replacement.
3. Please check if the power cord, plug and the control panel is loose or damaged, or if the housing is cracked or deformed due to the heavy hit, please do not use the appliance if in any above cases, contact your local distributor immediately.
4. Do not operate the appliance without less water level to avoid damaging the heating elements.
5. Do not let the cord hang over the edge of table or counter, and not keep the appliance touch

any hot surface.

6. Do not place the appliance on or near any gas or electric burner or inside heated oven.

7. Do not put the appliance into a working disinfection cabinet.

8. Do not freeze the appliance in the refrigerator.

9. Do not lean the appliance or operate it upside down

10. Do not use it outdoors.

11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.

12. Make sure to operate the appliance when children is under good custody.

13. This appliance is not a toy, please make sure the children do not play with it.

14. Please ensure the appliance is used on a firm and flat surface out of reach of children, to avoid being overturned in a sudden and result in the scald or hitting injury.

15. To protect against a fire, electric shock or other personal injury, do not immerse any part of the appliance in water or other liquid

16. Do not touch the hot surface, water spout when the appliance is operating

 
17. While the appliance is under working, do not touch or block the steam outlet by hand or other stuff, do not open the water tank lid in a rush, in order to avoid the scald by the hot steam or cause any other malfunctions.

18. To avoid being scalded, it is prohibited to use hand or any parts of your body to feel the temperature or steam when the appliance is using


19. Do not use the appliance to heat anything other than water. Do not fill above the “max” indication. Do not operate it if water is below minimum.

20. Unplug the appliance before do the cleaning, and make sure it is cooled down thoroughly.
21. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid any hazard.
22. The power cord could only be replaced by the exclusive power cord if any damages.
23. Do not operate the appliance when it is out of working or with malfunctions, return it to the nearest authorized service agent or manufacturer for examination, repair or replacement, do not try to disassembly it by yourself.
24. This appliance is intended to be used in household and similar locations such as:
- staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
25. Warning: Misuse may cause injury.
26. The heating element surface is subject to residual heat after use.
27. Please save this instruction booklet.

2 Mainpart name

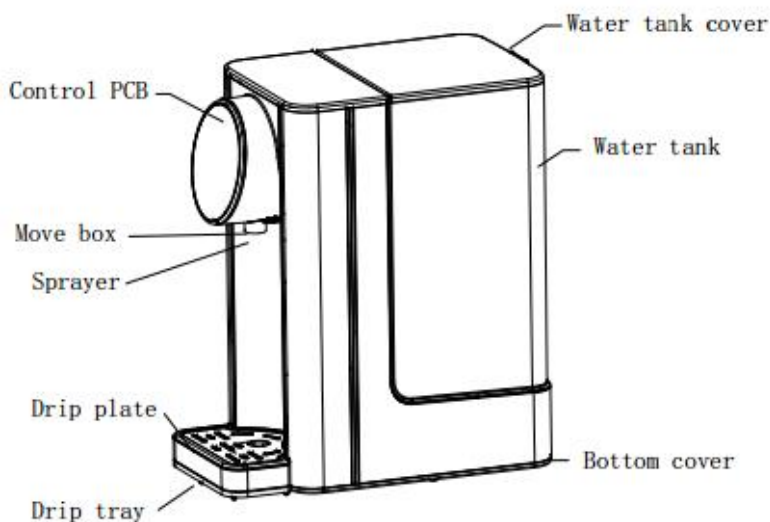

3 Control panel details

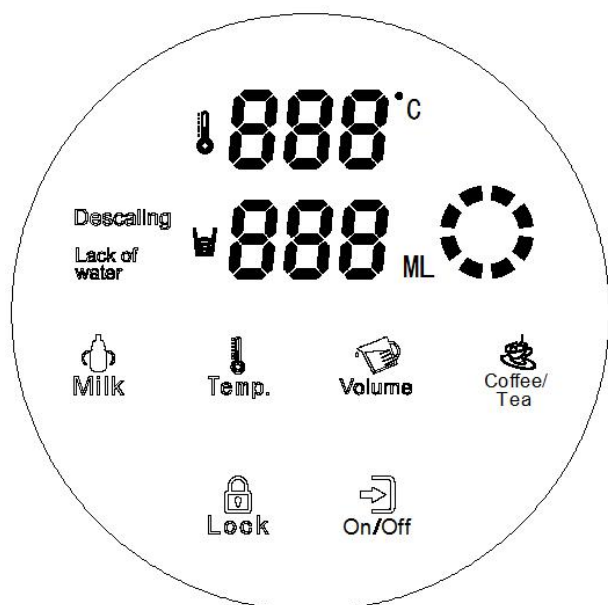 

Lock button: press it about 3-5 seconds to unlock, lock without any act within 10 seconds, you can lock the screen free by press **Lock** button.

Temp. button: Set the desired temperature according to 45°C,55°C,65°C,75°C,85°C,100°C
000(normal temperature water)

Volume button: Set the water volume according to 100ml,200ml,300ml,400ml,000(flow water continuously)

Milk button: Put the proper milk powder in the bottle or cup,press and hold the **Milk** button without loosen, temp. will indicate 40°C ,after you get the desired volume of water,release the finger from button,the appliance stop working at once.

Coffee/Tea button: press button and display will show 92C,you can select volume by 000(continual),100ml,200ml,300ml,400ml,after setting the water volume you want,press **On/Off** button to start the operation.

On/Off button: Start and stop function setting.

Descaling: When the time use has reached a cumulative of 10 hours,the **Descaling** light will flash on display to remind the need of cleaning the appliance,fill water in tank until max level,add some citric acid or vinegar into water which can help for better descale,press the

Volume button for about 3 seconds to enter the process of descaling,let water dispensing out until empty.The **Descaling** flash will unlock.

 
Lack of water: when the water in tank is less than MIN level,the E7 and Lack of water flash on display to remind the need of refilling water in tank.

4 How To Use

If use the appliance for first time, please clean up the water tank before use. Always unplug from the plug socket and allow to cool down before cleaning,the surface of the water tank is wiped over with damp cloth and polished with a soft dry cloth and fill in the clean water to clean,for initial use,please dispensing out all of water in tank as cleaning the appliance, then refill the proper clean water to be ready for operation.

1. Fill in water

Open the lid, fill the water tank with the desired amount of water, and then close the lid. Note: the water level must be less the Max level and over the Min level. You can select two methods as per the following.

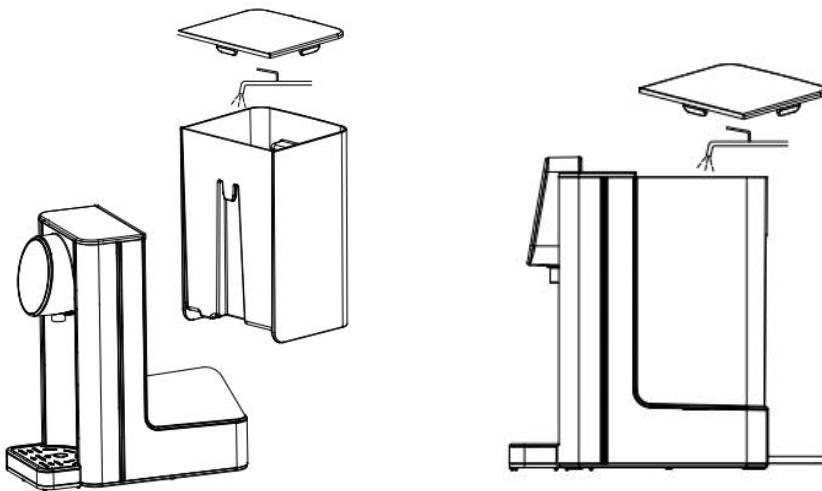

Tips: Suggest to use purge water in the appliance

2、 Obtain desired water

Make sure the plug is connected to the proper wall outlet and fill in the water with desired amount. Place your cup on the removable water tray, make sure it aligns with the spout,select the temperature and volume you want and press the button **On/Off** to operate the

appliance, about 5-10s, the desired water will flow out continuously from water spout, when you obtain desired water, press the button **On/Off**, the appliance will stop working at once. If you want to obtain water again, only repeat the above procedure.

Calibrating of temperature and water volume

If you found the temperature and water volume is not so accurate,

You can calibrate as below:

Fill water in tank till max level, press and hold the **“Temp”** button for 3 seconds, the temperature display will show **“AUT”**, the flow volume will display **“000”**, press **“On/Off”** button before locking. The appliance enters the adjusting mode: from 45-55-65-75-85-100 sequential adjustment and automatically exit after completion. The time is about 4-5 minutes. The water will flow out from the dispensing nozzle during the process. Put a large container under the dispensing nozzle.

Remarks

--Do not touch the boiled water and steam in order to protect against the scald by the boiled water and hot steam.

-- If the appliance stop to operate with beep sound and the PCB panel show E7 symbol, means the water is lack, need to fill the cool water in the water tank immediately

 
--The appliance can memorize the last operation method anytime without disconnecting the plug

--As the appliance has memory function when connecting to plug, please use about 60 seconds first in order to obtain desired temperature water, but it's memory will be lost after unplug.


--As ambient temperature change everyday, the water volume will undulate within -15% to +15%

--The appliance have manual thermostat to recover the heating function for abnormal

operation,if the unit is no power, stop working, not boiling the water, you can reset the thermostat by using the reset key to press the reset hole on the back of appliance for several times under plug out,after that plug in and operate the appliance.

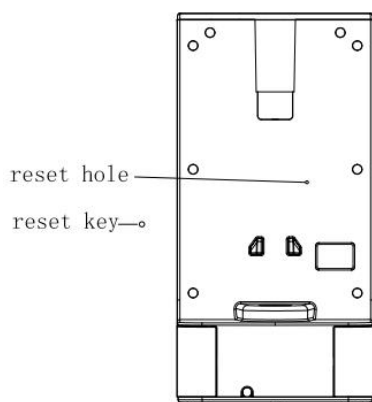

 
--After cleaning the appliance, please open the drainage stopper in order to clean up waste water. Please tighten the drainage stopper after opening it.

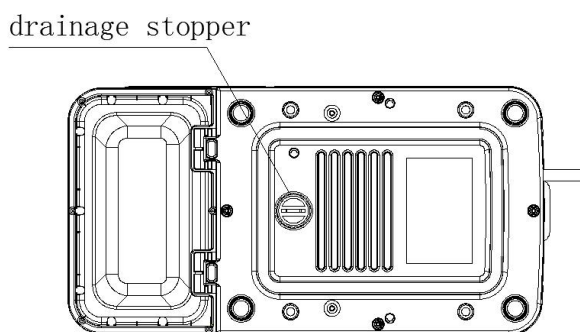

Note: If found water leakage from the bottom, pls tighten the drainage stopper.

3、 Water disposal from the water tray

 When the water tray is full, to grasp and stabilize the appliance by one hand, use another hand to lift up the water tray slightly to remove it, empty the water tray and insert it into the original place with proper force.

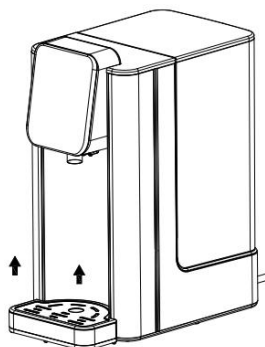

5 Cleaning and Maintenances

1. Always switch off and unplug your water dispenser and allow it to cool completely before cleaning.
2. Do not immerse the appliance into any liquid to avoid the damage.
3. To maintain its performance, suggest to descale the appliance when the **Descaling** flash on display. When the time use has reached a cumulative of 10 hours, the **Descaling** light will flash on display to remind the need of cleaning the appliance, fill water in tank until max level, add some citric acid or vinegar into water which can help for better descale, press the **Volume** button for about 3 seconds to enter the process of descaling, let water dispensing out until empty. The **Descaling** flash will unlock.
4. Do not use any chemical, metal, wood or abrasive detergent to clean the appliance housing, always use a damp cloth.
5. Always handle the appliance gently, do not place it near the edge of the table and the counter, to protect against the deform or function damage in case it fall down from the table accidentally .

6 Error Code

Display show E7	Lack of water	Fill water in tank till max level
Display show E5	Temperature sensor of water inlet has problem	Send the machine to local after-service center to check or replace the temperature sensor
Display show E4	Temperature sensor of water outlet has problem	Send the machine to local after-service center to check or replace the temperature sensor
Display show E0	PC Board has problem	Send the machine to local after-service center to check or replace the PC Board

7 Storage

If do not use the appliance for long, unplug and clean it, then put back into the original packing box to avoid the electrical components are humidified or damaged

 
8 Technical specification

Model no: VIB-D2798SS

Volume: 2.7L

Rated: 220-240V, 2200-2600W

Frequency : 50/60Hz **Environment friendly disposal**

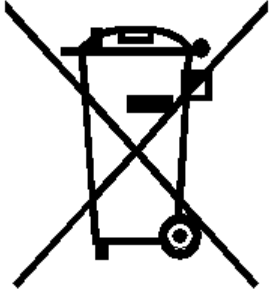

You can help protect the environment!
Please remember to respect the local regulations:
hand in the non-working electrical equipments to
an appropriate waste disposal center.



Service Centre: F-06-03, Setiawalk, Pusat Bandar Puchong, 47160 Puchong, Selangor, Malaysia.
Service Hotline: 03-86001648